



## Quick Setup Instructions

Plug the alarm into the power source  
Do NOT put the battery in at this stage.




Wait for LED 1 to stay on.

Press the “O” on the Key Fob to synchronise for a house or large flat or the triangle “Δ” to synchronise for a Caravan Motorhome or Smaller Areas.

*Repeat this for additional fobs.*

Press The “O” to ARM the Alarm  
Note It will take 20 seconds to arm.

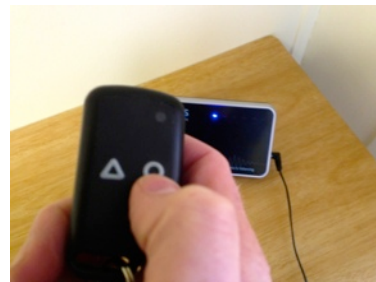

Give the alarm another 5 to 10 seconds to stabilise then open a door or window to test the unit, ideally from outside the building. Once complete with power still on insert the backup battery into the unit and you are ready to use.